


## PN# 777426 Camber Arm Instructions

When Installing MMR Camber Arms the inboard mount (slotted) **MUST** be pushed fully inboard. Failure to follow this step will cause the Camber arm to contact the frame rail, causing damage and potential failure. **PUSH THE CAMBER ARM ALL THE WAY IN BEFORE TIGHTENING!!!!**

The inboard mount of the camber arm is set from the factory, it does not require adjustment. Be sure however to always check the lock nut on the inboard mount prior to installation for tightness.

If ANY noise is ever detected after installation and during use, **RECHECK** all hardware for tightness!!! Noise is a sure sign that a fastener or lock nut has come loose.

Always verify that the Camber arm clears your axle.

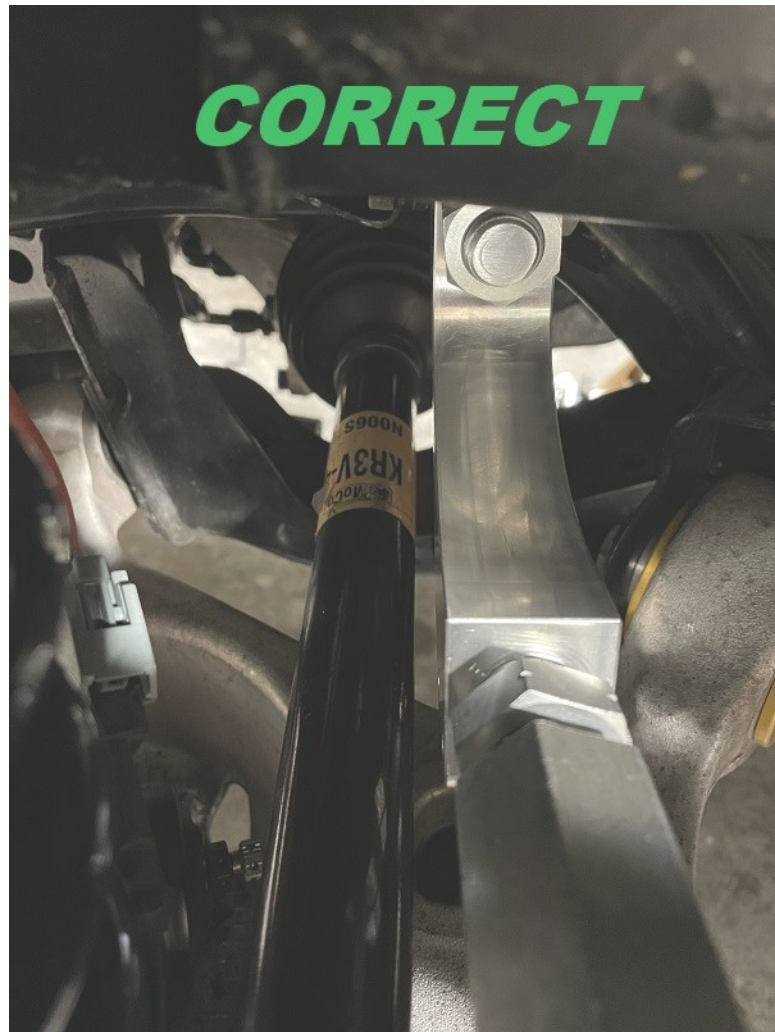

***INCORRECT***

